
# RenéHERSE

## STRADDLE CABLE YOKE

-Version 2020 05\_14

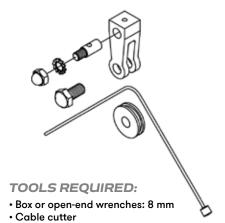

#### **INSTRUCTIONS**


Torque: 8 Nm

**Warning!** The brake cable must protrude from the hole on the inside of the yoke (1).

#### Installation:

The yoke works with the brake cable sticking out (2), but this locks the roller and looks clumsy. After setting up your brake, we recommend shortening the brake cable.

- Use a piece of tape to mark the brake cable 18 mm above the entry into the yoke (2).
- · Unhook the straddle cable.
- · Remove the lower bolt and the roller.
- Loosen the upper bolt and push the brake cable into the yoke, until the tape is at the top of the yoke.
- Cut the cable at the bottom of the yoke (3).
- Pull the cable back into the yoke and reassemble.
- The brake cable exits the yoke at a slight angle. Use your thumb to push the brake cable straight (4).

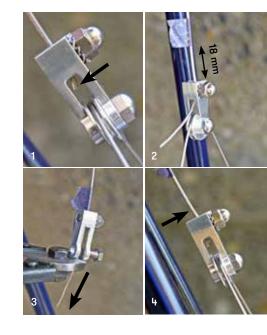

#### **ROLLER SETTINGS:**

The yoke can be reversed.

- Threads at screw head: Roller rotates.
   This centers the brake arms each time you brake. It eliminates the need to center the brake after removing and reinstalling a wheel.
- Threads at screw end: Roller fixed. This allows you to set the straddle cable off-center. This may be necessary if your brake's springs have uneven tension.

### **IMPORTANT SAFETY CHECK!**

Perform this check before every ride:

 Pull hard on both brake levers to make sure your brakes work properly. It is easy to forget to hook up the straddle cable after removing a wheel.



Rene Herse Cycles 2442 NW Market St. #426 Seattle, WA 98107, USA